



# Garmin Express Screens

## Start Garmin Express

Click on Device

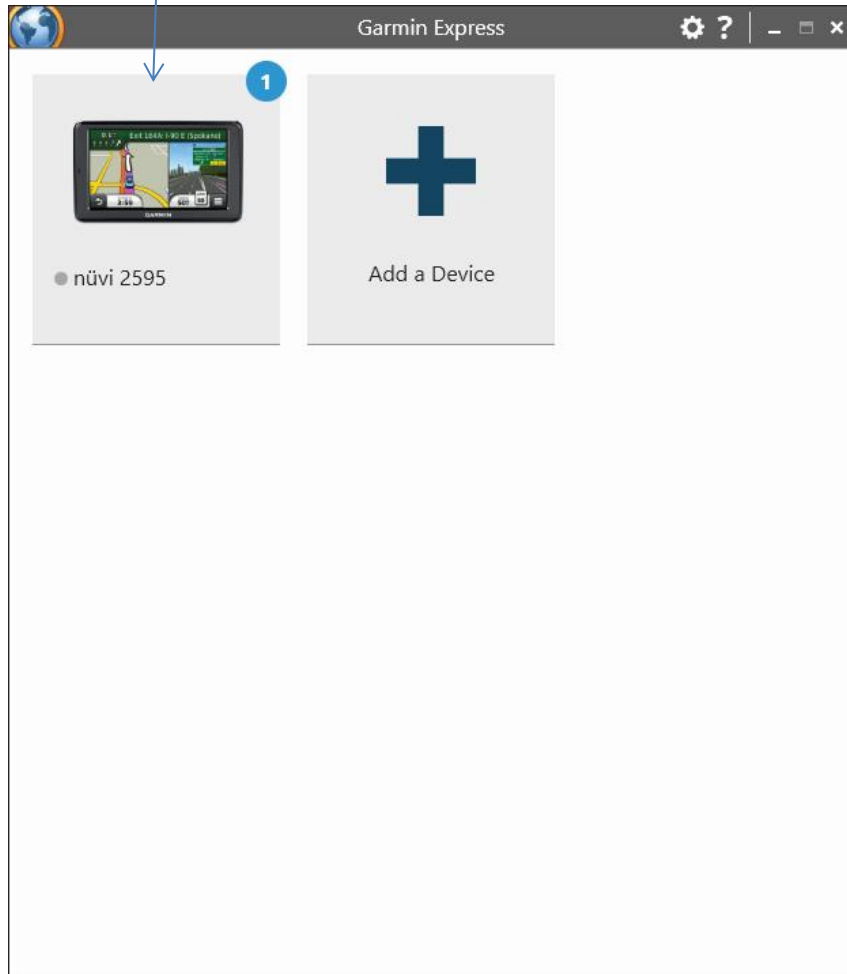

Click on View Details


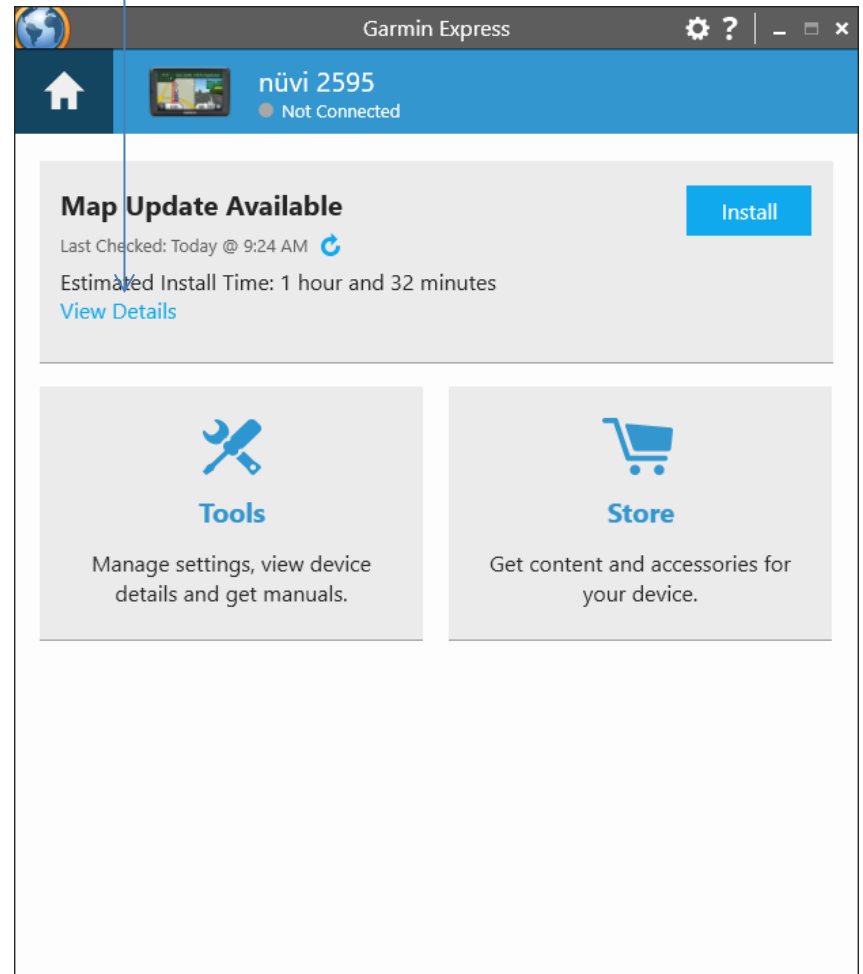


# Garmin Express Screens

Click on Installation Options

Click on Computer Only


Click on Install

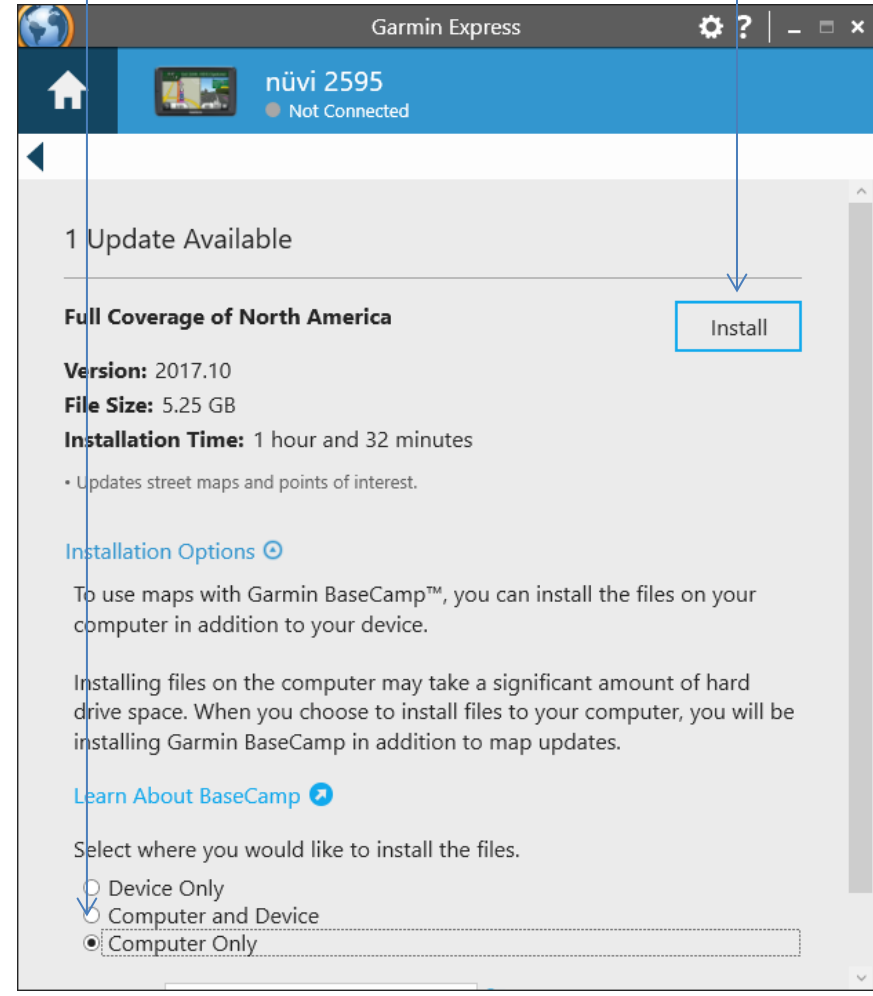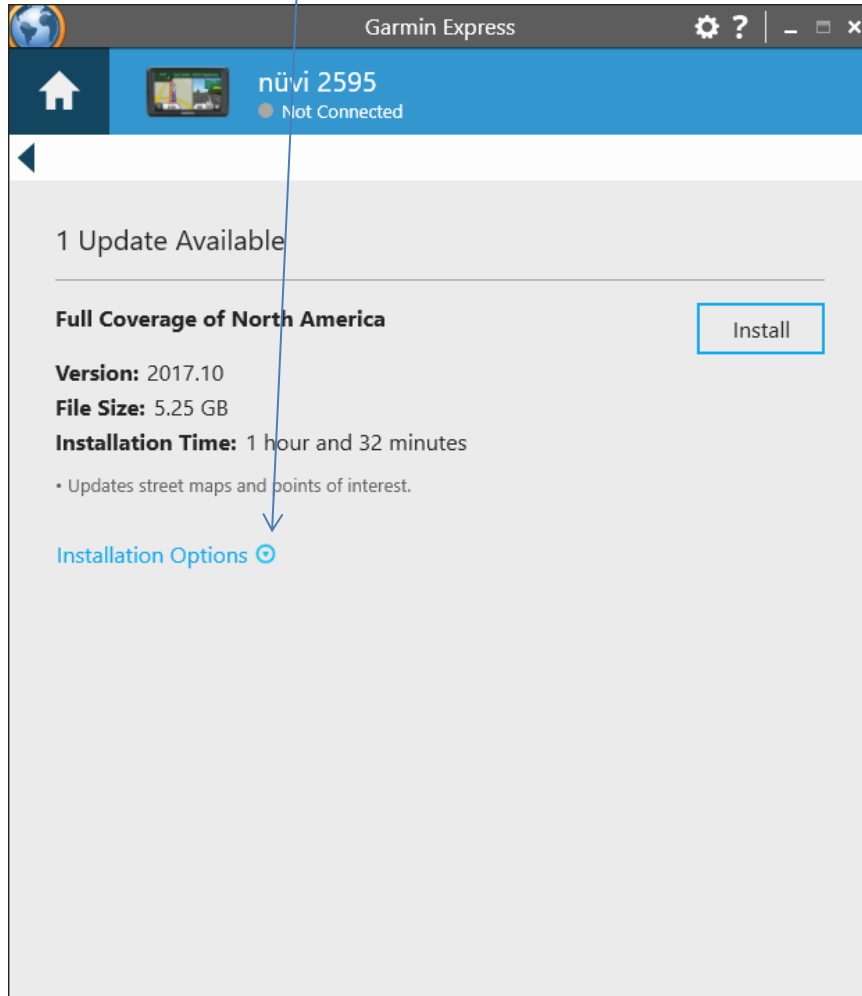

After you click on Install the maps will be loaded on your computer. When finished, exit Garmin Express


## Computer Screen – File Explorer

Load the SD card from your Garmin into your adapter, then into your computer. Using File Explorer (screen may just pop-up when you load SD) be sure you have enough space to load the new maps. If not, delete some or all of the maps in the Map folder until you have at least 3 gigs available on the SD card. Start BaseCamp.

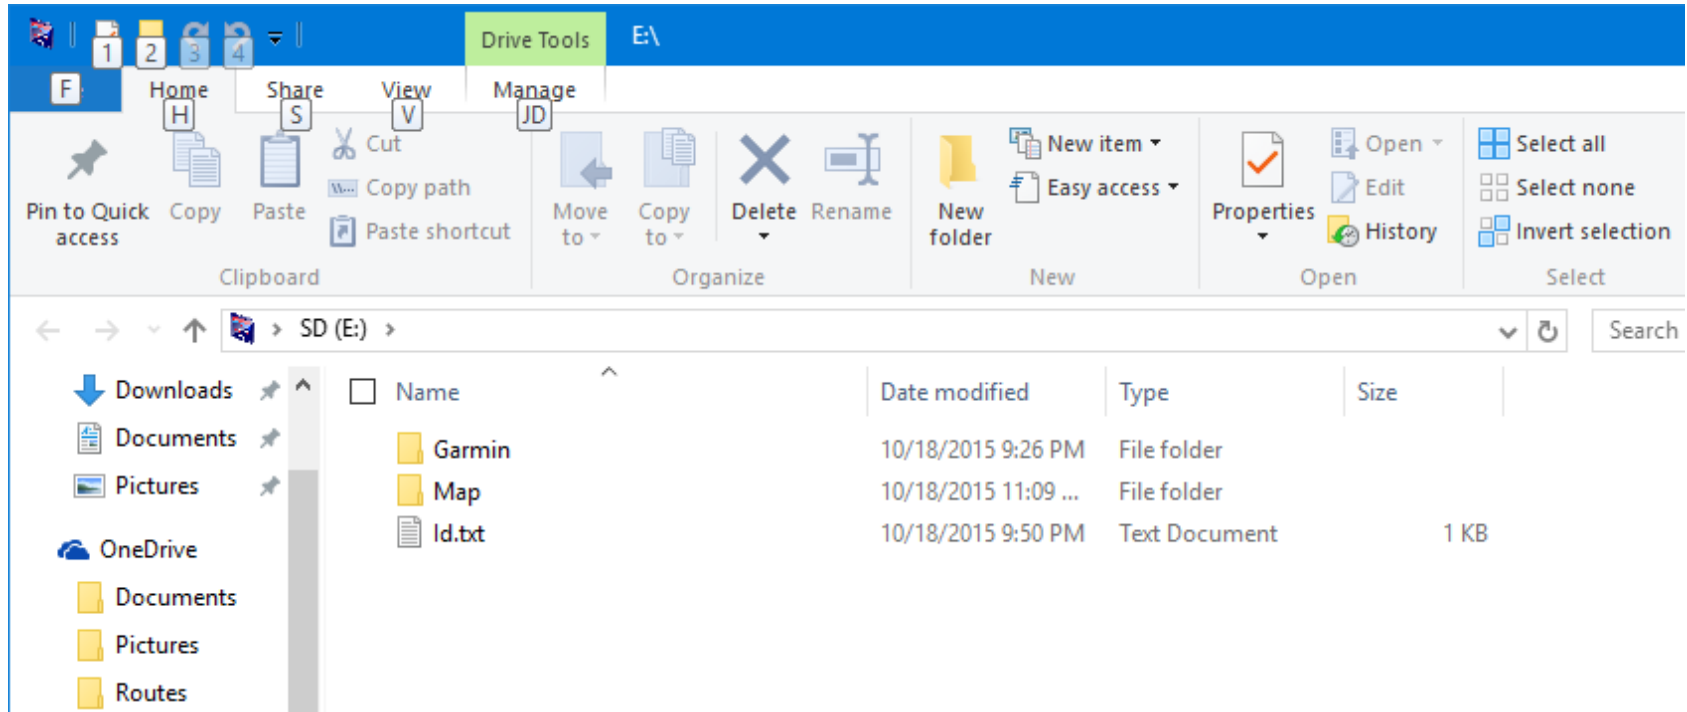


# BaseCamp Screens

Go to Maps|Install Maps in the menu line

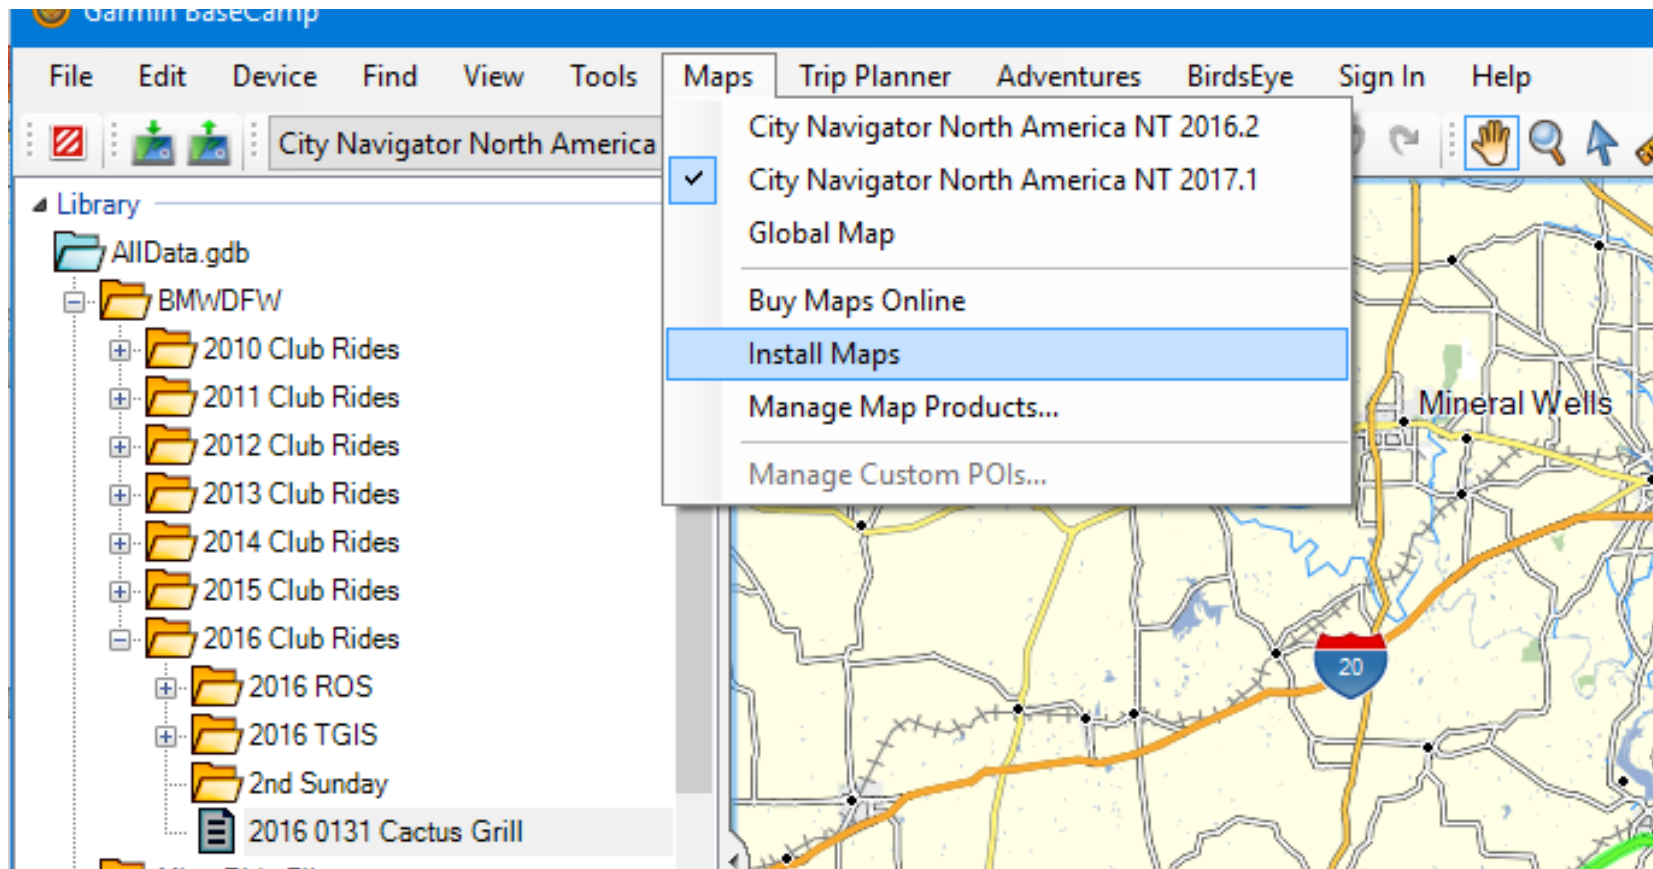

## BaseCamp Screens


You'll get this pop-up screen and your SD card will automatically show in the Device box. If it does not, click Find Device. Once your card is recognized, click Continue.

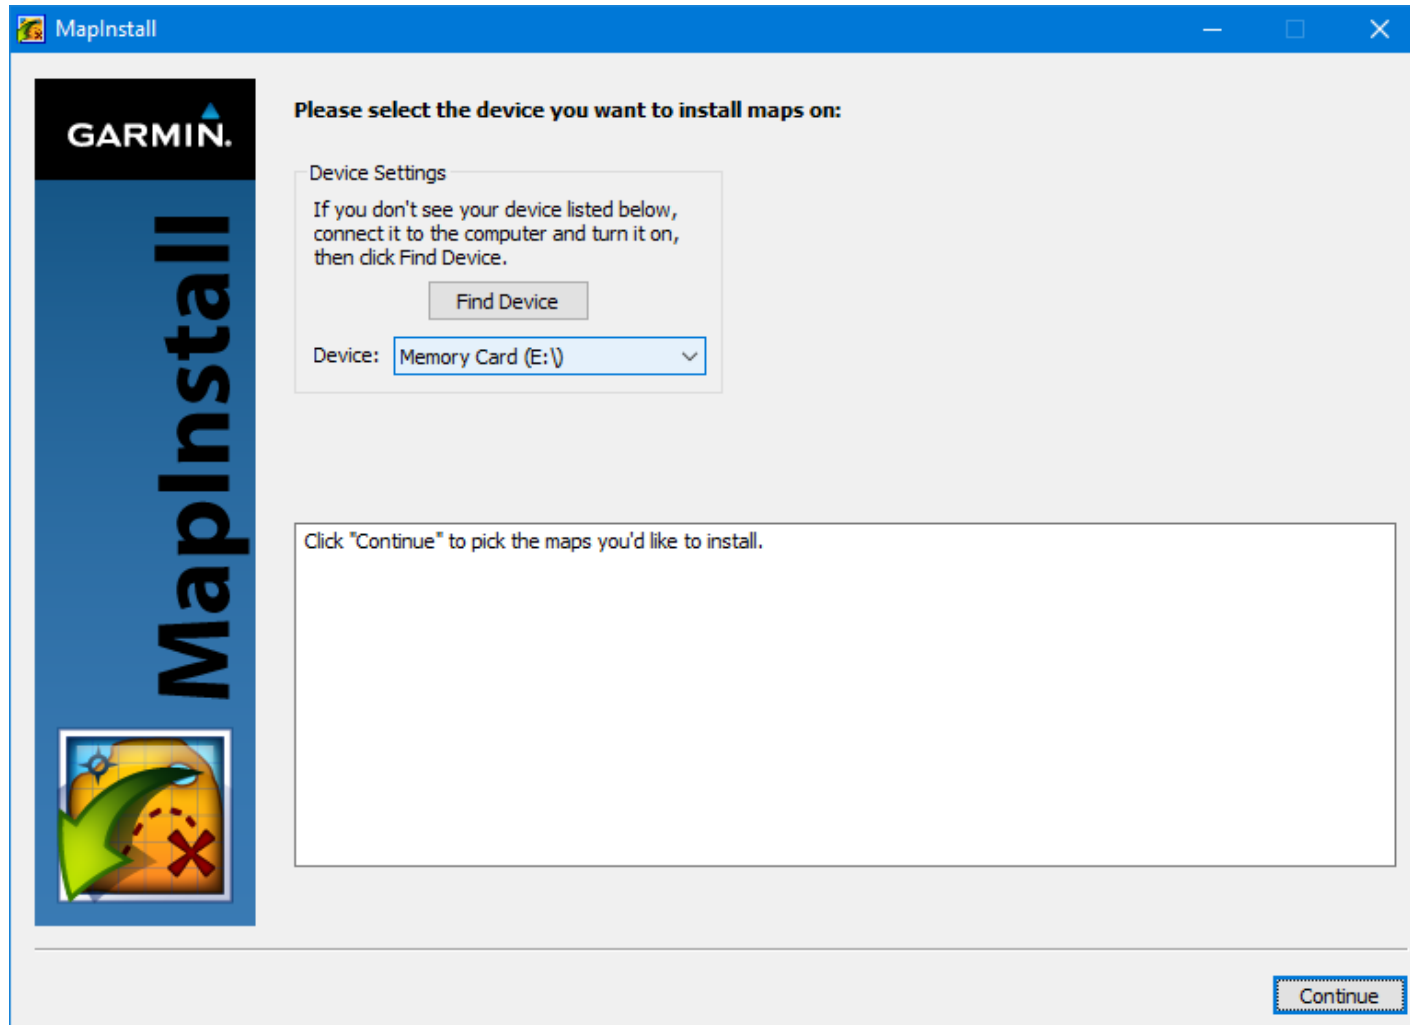

# BaseCamp Screens

Next up is the Map Install pop-up.

To select all the maps to be loaded on the SD Card, set Zoom to the Top, Pan so all the maps are visible. Click and hold the left mouse button on the far upper left side of the map screen and drag your mouse down to the lower right hand side of the screen highlighting all the maps to be loaded. Then release the left hand button on the mouse.

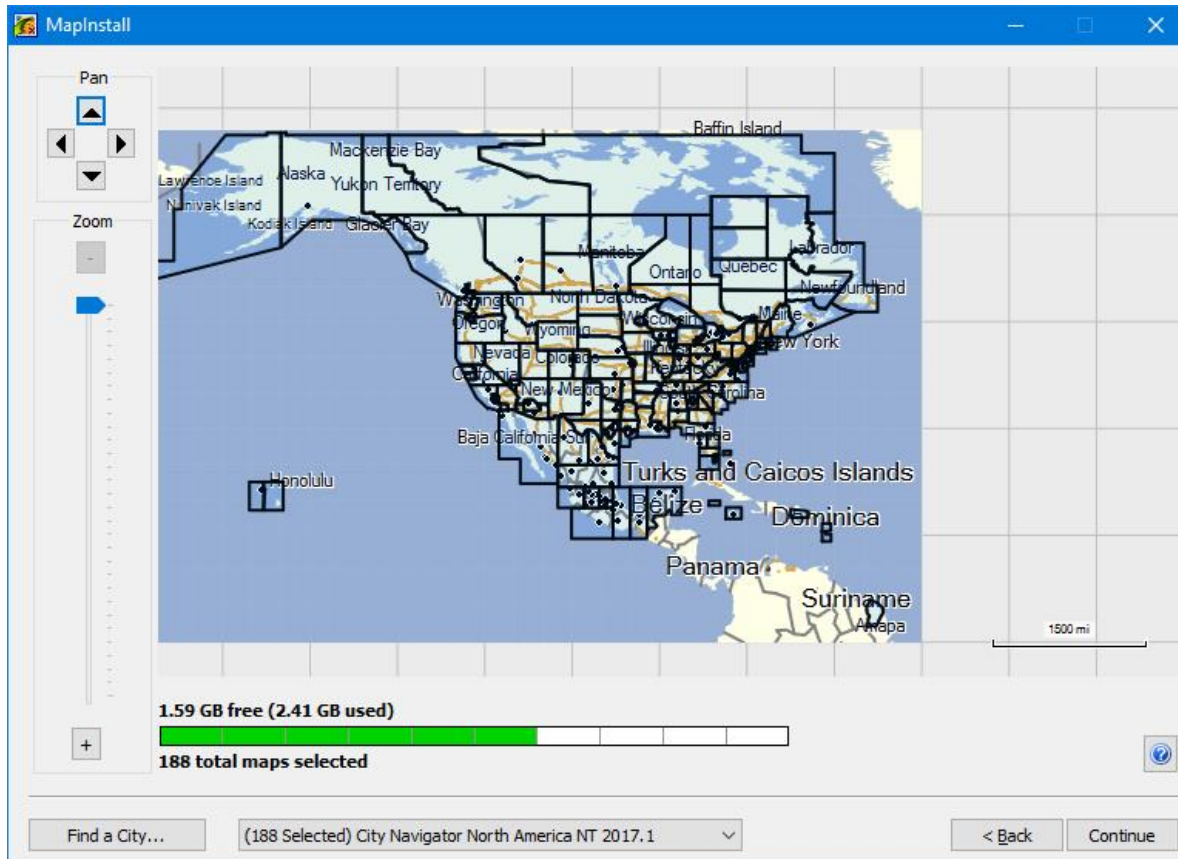

When all the maps are highlighted, click Continue. When it's finished, load the SD Card back into your GPS.

Start the GPS at least one time before you hook it up and start using BaseCamp to build or download a route.

Be sure to change to the new maps in BaseCamp.

